
PART NUMBER: 250-1883

GENERAL APPLICABILITY

DODGE V8 AND HEMI MOTOR CARRYING 4 CONNECTOR ECM

KIT CONTENTS/SERVICE PARTS

ITEM	QTY	DESCRIPTION	Part#
1	1	CRUISE CONTROL MODULE	250-2845
2	1	Main Wiring Harness	250-2838
3	1	Pedal Interface Harness	250-2761
4	1	Hardware Kit	250-2767

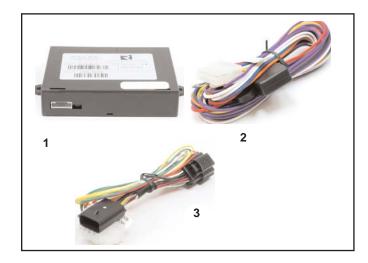

HARDWARE BAG CONTENTS

Ітем	Qτγ	DESCRIPTION
1	8	Wire Zip Ties

RECOMMENDED TOOLS

PERSONAL & VEHICLE P	ROTECTION
SAFETY GLASSES	
SPECIAL TOOLS	
Volt-Ohm Meter	
INSTALLATION TOOLS	
TRIM REMOVAL TOOL	
SOLDERING TOOL	
SPECIAL CHEMICALS	

CONFLICTS

NOTE:

LEGEND



STOP: DAMAGE TO VEHICLE MAY OCCUR. DO NOT PROCEED UNTIL PROCESS COMPLIANCE HAS BEEN MET.

OPERATOR SAFETY: Use Caution to Avoid Risk of Injury.

<u>CRITICAL PROCESS:</u> PROCEED WITH CAUTION TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED ON A COMPLETED VEHICLE INSTALLATION.

<u>GENERAL PROCESS</u>: THIS HIGHLIGHTS SPECIFIC PROCESSES TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED DURING THE ACCESSORY INSTALLATION.

TOOLS & EQUIPMENT: THIS CALLS OUT THE SPECIFIC TOOLS AND EQUIPMENT REQUIRED FOR THE PROCESS.

<u>REVISION MARK:</u> THIS MARK HIGHLIGHTS A CHANGE IN INSTALLATION WITH RESPECT TO PREVIOUS ISSUE.

∇

L.


CAUTION: DO NOT USE HAND-HELD 2-WAY TRANSCEIVERS INSIDE YOUR VEHICLE WHILE DRIVING.

Rostra does not recommend the use of 2-way hand held commercial radios (more than 2 watts of power) inside your Yaris while driving and using the cruise control. The computer (ecu) in the vehicle may interpret the transmitting signal from your radio as a potential engine problem which may cause the vehicle to go into "limp mode" which limits vehicle speed. See your Toyota dealer for information on "limp mode" and your Toyota Owner's Manual regarding installation and use of mobile 2-way radio systems.


USE OF CELLULAR PHONES WILL NOT INTERFERE WITH THESE CONTROLS.

DUE TO SENSITIVE NATURE OF SIGNALS USED FOR THIS PRODUCT, ALL NON-PLUG AND PLAY CONNECTIONS MUST BE SOLDERED. FAILURE TO COMPLY WITH THIS REQUIREMENT WILL VOID WARRANTY.

INSTALLATION

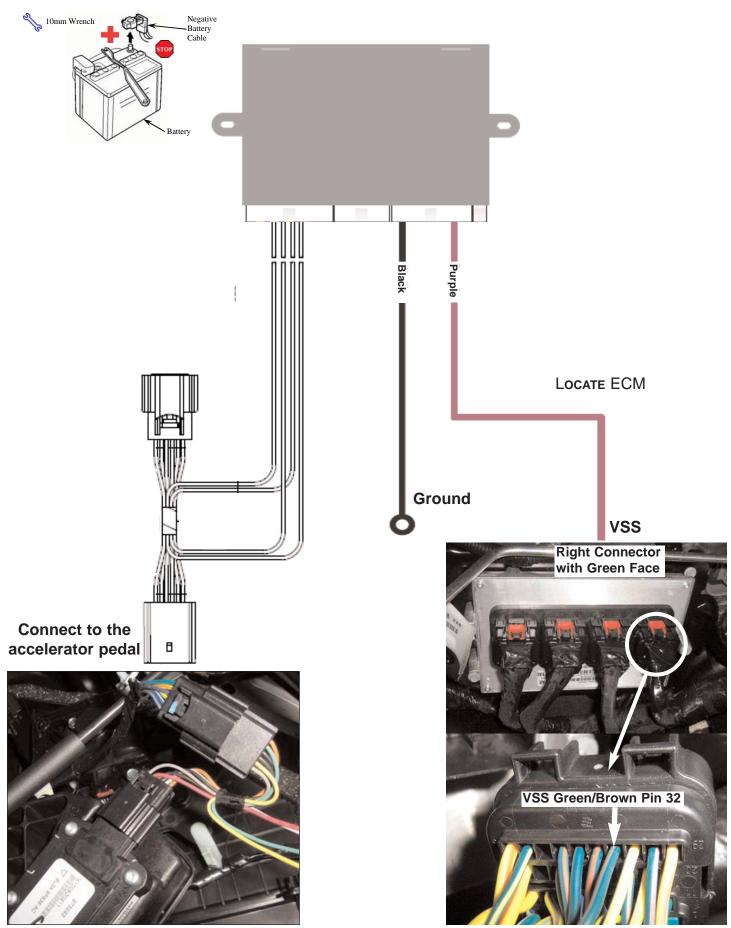


INSTALLATION

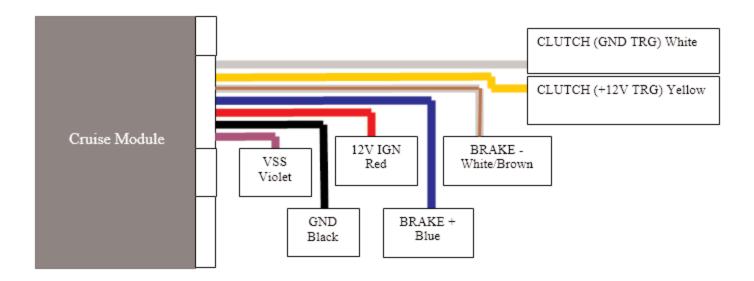

Function	Cruise Harness Color	
IGN	RED	+12V when switched on and +0V when Switched off.
BRAKE +	BLUE	"Hot" side of brake switch. +12V all the Time.
BRAKE -	WHITE/BROWN	"Cold" side of Brake switch. Zero (0) resistance to ground when brake is not Pressed. +12V when brake is pressed.
VSS	VIOLET	ECM square wave signal 4000 PPM
Clutch (GND Triggered)	WHITE	Ground active wire at switch when clutch Is depressed.
Clutch (+12V Triggered)	YELLOW	+12V active wire at switch when clutch is Depressed.
Ground	Black	Lowest resistance to ground closest to Zero (0) ohms as possible. Use a vehicle Ground point where other ground wires are connected to.


TROUBLESHOOTING

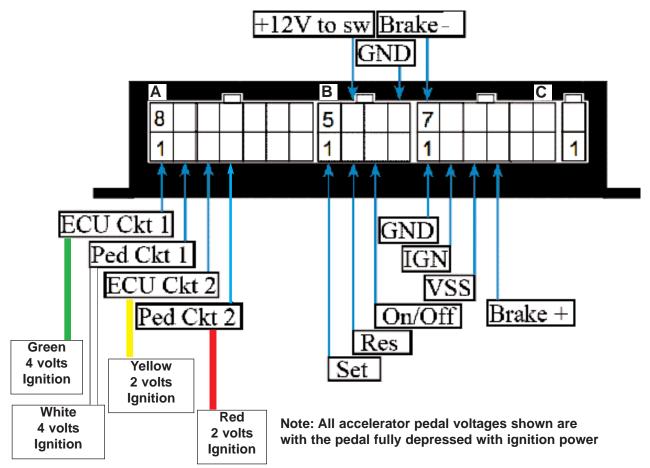

ΡιΝ	COLOR	DESIRED RESULTS	FAULT CONDITION
2C	Red	(IGN) +12V when switched on and +OV when switched off. Ignition must be greater than	NO POWER, VOLTAGE DROP, OR INTERMITTENT CONNECTION WILL CAUSE LOSS OF PEDAL OR
		+10V WHILE CRANKING VEHICLE.	"LIMP MODE" CONDITION.
4C	BLUE	"HOT SIDE OF BRAKE SWITCH. +12V ALL THE	CRUISE WILL NOT FUNCTION IF THIS
		TIME.	CONNECTION IS NOT INSTALLED CORRECTLY.
7C	BROWN/WHITE	"Cold" side of brake switch. Zero (0)	CRUISE WILL NOT FUNCTION IF THIS
		RESISTANCE TO GROUND WHEN BRAKE IS NOT	CONNECTION IS NOT INSTALLED CORRECTLY. IF
		PRESSED. +12V WHEN BRAKE IS PRESSED.	CONNECTION IS GOOD, AND THERE IS A HIGH
			RESISTANCE TO GROUND, A 5 TERMINAL
			RELAY WILL BE REQUIRED TO COMPLETE
			INSTALLATION. SEE DIAGRAM ON NEXT PAGE.
3C	PURPLE	(VSS) VEHICLE SPEED SENSOR CIRCUIT	CRUISE WILL NOT FUNCTION IF THIS
			CONNECTION IS NOT INSTALLED CORRECTLY.
			CRUISE WILL ACCELERATE IF THERE IS AN
			INTERMITTENT CONNECTION.
1C	BLACK	LOWEST RESISTANCE TO GROUND AND CLOSEST TO	A BAD GROUND CONNECTION WILL CAUSE THE
		ZERO (0) OHMS AS POSSIBLE. USE A VEHICLE	FOLLOWING CONDITIONS: CRUISE WILL NOT
		GROUND POINT WHERE OTHER GROUND WIRES ARE	FUNCTION, LOSS OF PEDAL OR "LIMP MODE"
		CONNECTED TO.	CONDITION.
1B	GREEN	Set/Coast: 12V press and hold set	CRUISE WILL NOT SET IF THIS CONNECTION IS
			NOT INSTALLED CORRECTLY.
2B	YELLOW	RESUME/ACCEL: 12V PRESS AND HOLD RESUME	CRUISE WILL NOT RESUME OR ACCEL IF THIS
			CONNECTION IS NOT INSTALLED CORRECTLY.
3B	Brown	ON/OFF: 12V PRESS ON	CRUISE WILL NOT SET IF THIS CONNECTION IS
			NOT INSTALLED CORRECTLY.
6B	RED AND BLUE	12V	\mathbf{C} RUISE LIGHT WILL NOT COME ON IF THESE
8B	BLACK	(0) OHMS RESISTANCE TO GROUND	CONNECTIONS ARE NOT INSTALLED CORRECTLY

TROUBLESHOOTING

5 TERMINAL RELAY FOR BRAKE SWITCH IF NEEDED

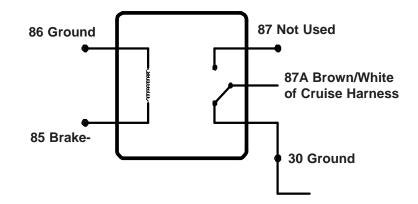

NOTES:

