

250-1775

2005-2007 CHEVROLET MALIBU COBALT-G6-G5 CUSTOM CRUISE

- 1) Mount **RF Switch Bracket** to bottom of steering shroud and slide **RF Switch** onto bracket as illustrated in **Figure 1**.
- 2) Connect **Receiver Box** to **RF Harness** and mount box in a secure location behind drivers dash with cable ties avoiding sharp edges and moving parts.
- 3) **Body Control Module (BCM)** is located on the passenger side of the center console. Remove panel and locate **Connector C2 or J2**.
- 4) Remove Cover of **Connector C2 or J2** by pressing the two release tabs thereby exposing the wires inside.
- 5) You must next remove the terminal lock which retains the wire pins in place: Unplug **Connector C2 or J2** from **BCM** and observe the **Lt. Green** terminal lock in the center of the terminal block.
- 6) Depress the two tabs of the terminal lock and slide the terminal lock out of connector body.

Note: Some 2007 Cobalt and G5 will not require doing steps 5,6,7 because there is a gray wire in position 61 of the C2 or J2 connector. Cut pin off gray wire from cruise harness and connect to gray wire in position 61 of C2 or J2 connector.



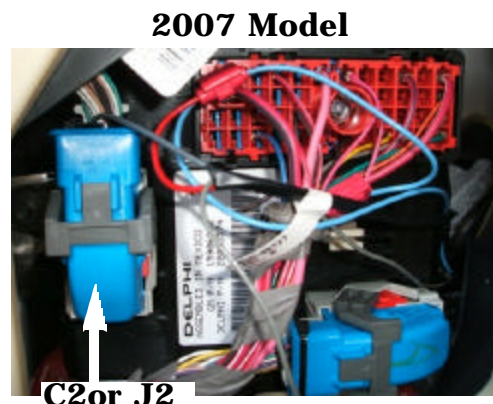


Figure 1

- 7) Carefully insert **Gray RF Harness Wire** with **Computer Terminal Pin** into **Postion 61** of **Connector C2 or J2**. Indicated at each end of **Connector C2 or J2** are number 55 and 72. Very small but indexed on the **C2 or J2 Connector**.
- 8) Utilizing T-Taps provided in kit, connect the **RED RF Harness Wire** to an **Accessory 12 Volt** power.
- 9) Utilizing T-Taps provided in kit, connect the **LT Blue RF Harness Wire** to an **Accessory Power Source** and the **BLACK RF Harness Wire** to the **Ground Terminal Wires**.

2005-2007 COBALT and G5 must use Tech 2 With Candi Module

1. Connect Tech 2 and Candi Module in communications port on drivers side bottom left of dash.
2. Turn Ignition switch on.
3. Go to BCM setup.
4. Go to options.
5. Select tire size.
6. SAVE.
7. select US. or CANADIAN.
8. SAVE.
9. Go to Opitions.
10. Hi Lite Cruise.
11. SAVE.

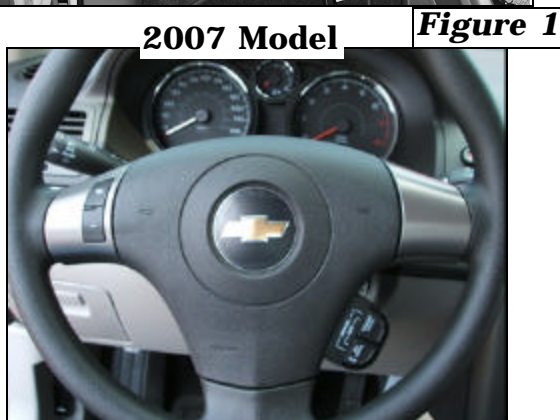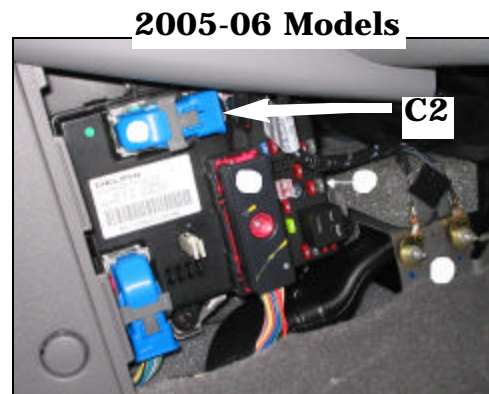

ROSTRA PRECISION CONTROLS, INC.
GLOBAL AUTOMOTIVE ACCESSORIES GROUP
2519 DANA DRIVE
LAURINBURG, NC 28352-4000
WWW.ROSTRA.COM
CERTIFIED QS 9000/ISO 9001
MADE IN THE U.S.A.