



# The Cruise Control

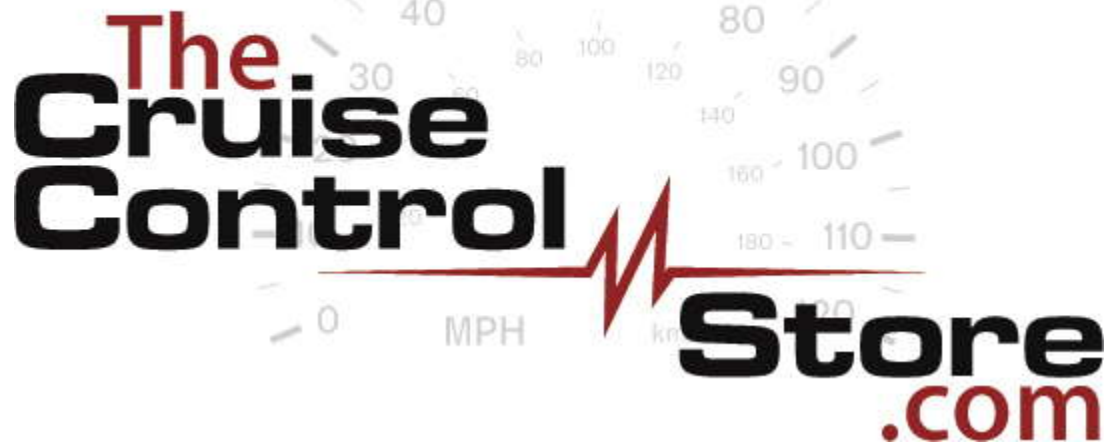

Store  
.com

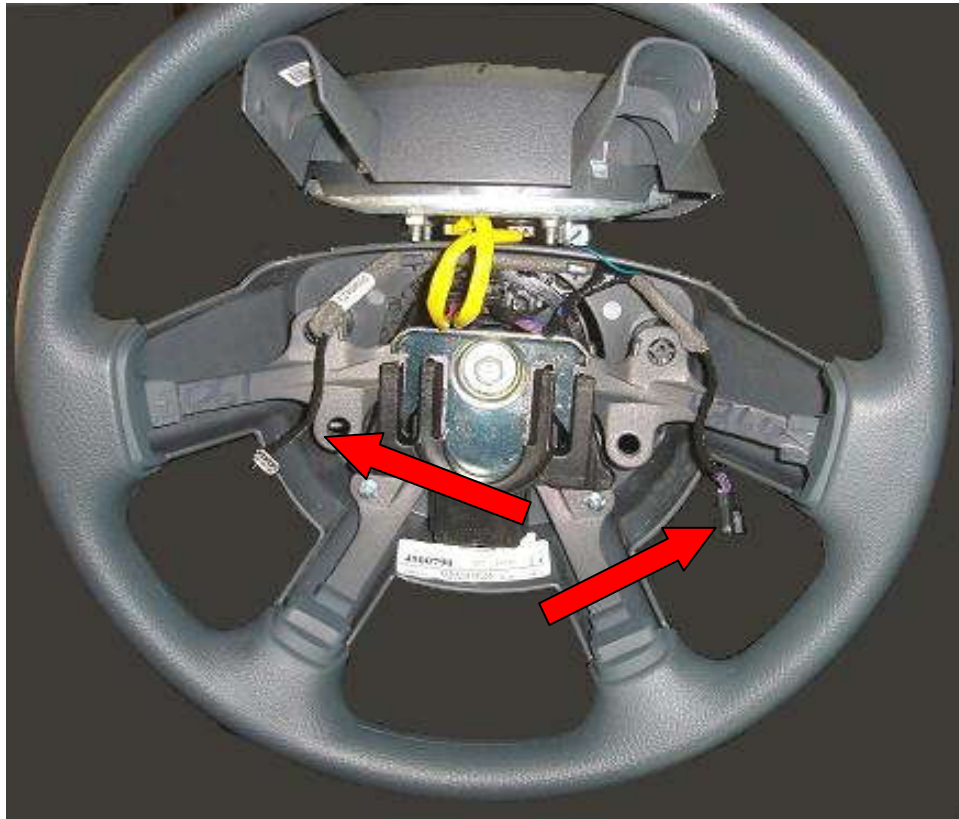

- 1) Remove 3 Torx screws from plastic shroud that surrounds steering column and 1 Torx screw from tilt lever. Remove plastic shroud.
- 2) Remove 2 10 mm bolts from rear of wheel securing horn pad. Set horn pad / air bag aside – do not disconnect !!
- 3) Remove Phillips screw securing each switch cover on wheel. Disconnect wires from covers ( red arrows ) and discard covers.
- 4) Plug existing wiring into new cruise switches ( red arrows ) and mount with Phillips screws that were removed in step 3.
- 5) Reassemble horn pad / air bag and plastic column shroud.
- 6) Installation complete. Test drive vehicle.